




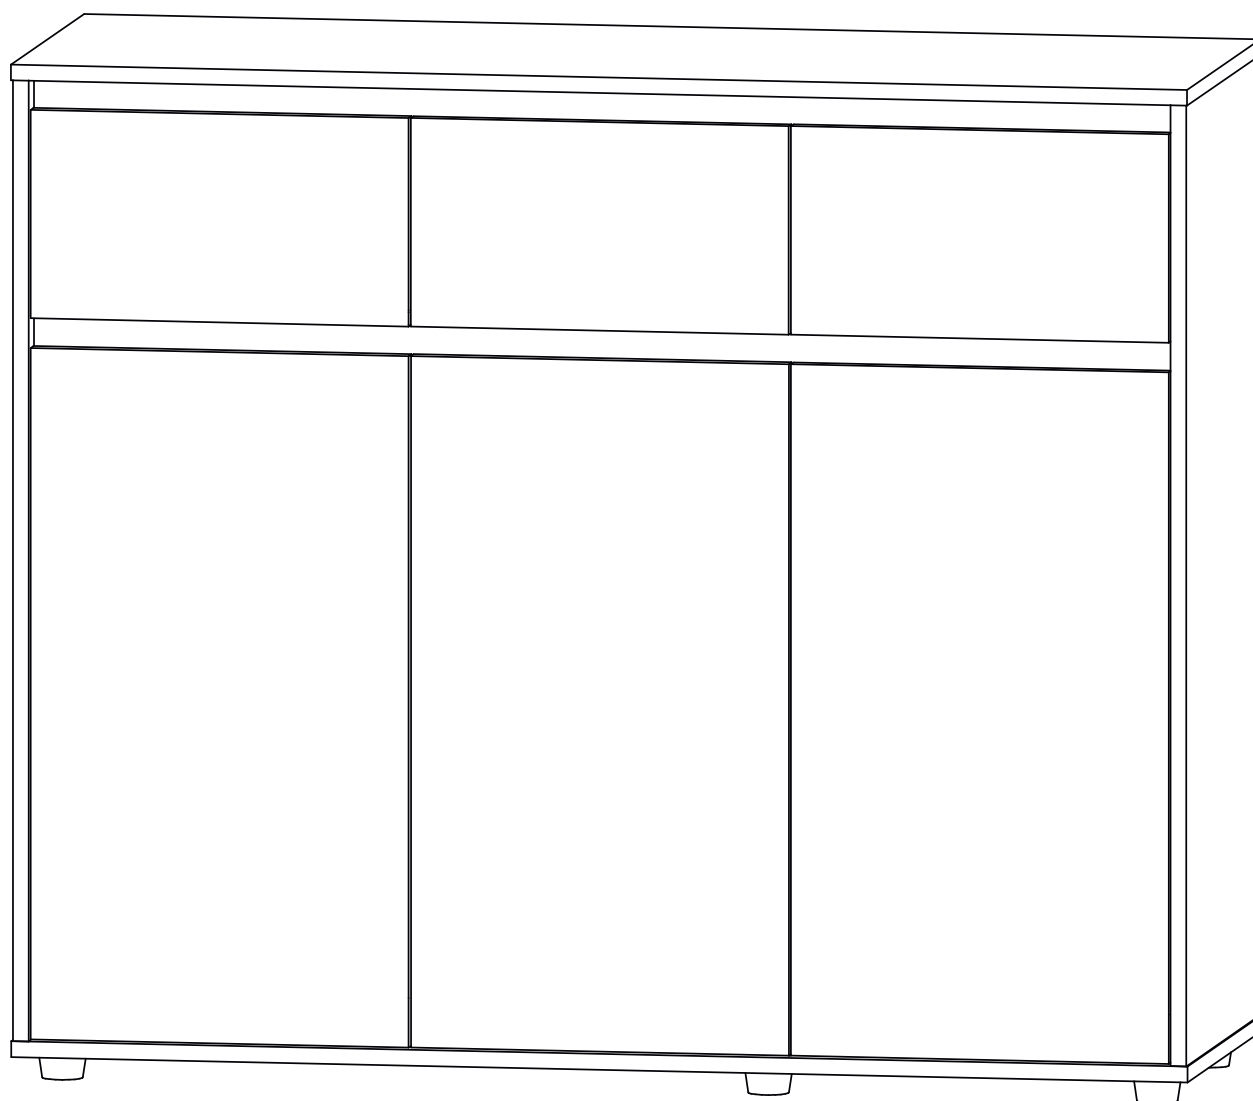


Комод 3x3 Light




Инструкция по сборке


Комод 3x3 Light 1200x420x1038

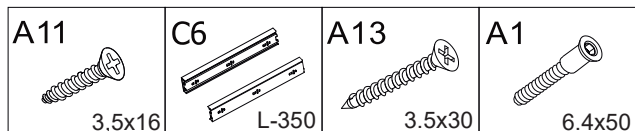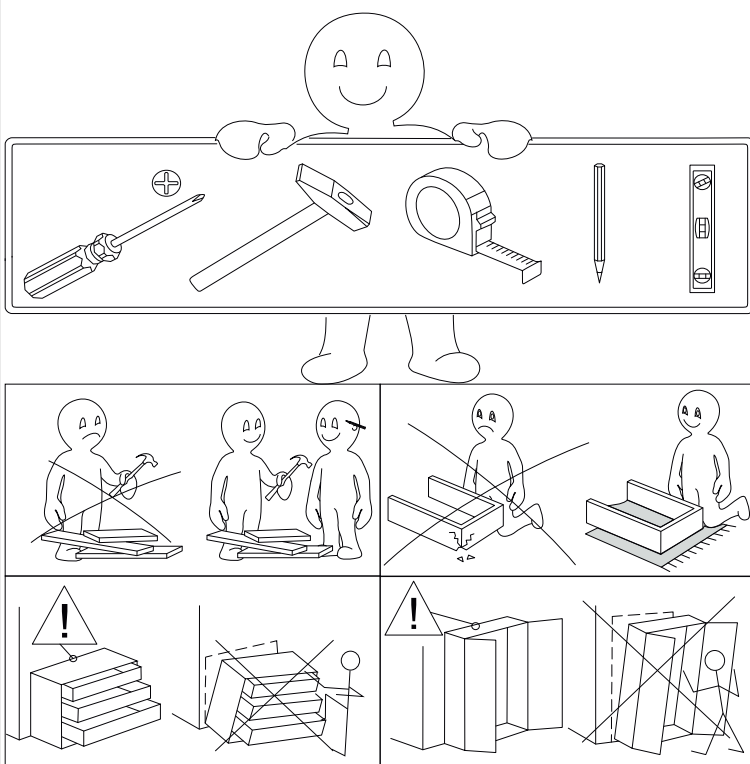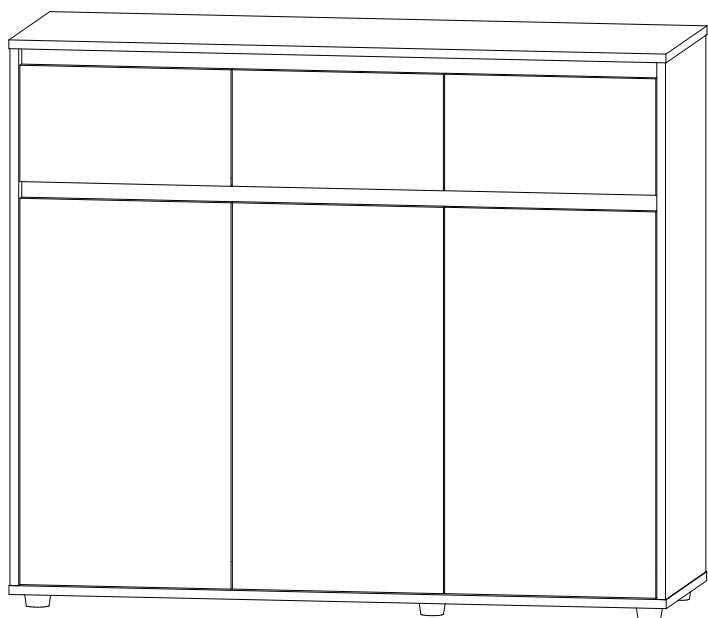


24 3 18 34

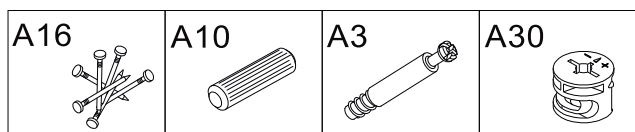


112 24 10 10

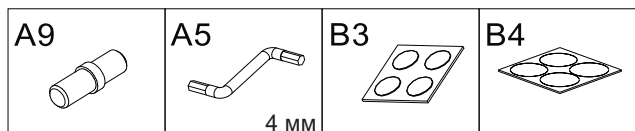

12 1 34 5

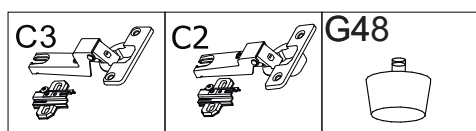

4 2 4

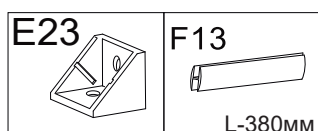

4 1

№	Д x Ш	К-во
1	1200x424	1
2	1200x419	1
3	973x418	1
4	973x418	1
5	767x400	1
6	385x700	3
7	672x400	1
8	400x380	2
9	370x284	1
10	370x284	1
11	1165x70	2
12	1165x70	2
13	377x60	3
17	1193x344	1
18	1193x291	1
19	1193x349	1
20	350x120	3
21	350x120	3
22	319x120	3
23	319x120	3
24	348x346	3
25	385x211	1

[illegible]


2

Diagram 2 illustrates the mounting of the door to the frame. The diagram shows three steps:


- Attaching the door to the frame using screws A11.
- Attaching the door to the frame using screws A30.
- Attaching the door to the frame using screws A30.

The diagram includes callouts for parts 9, 10, and C6, and a note about the door being heavy and requiring assistance.


3

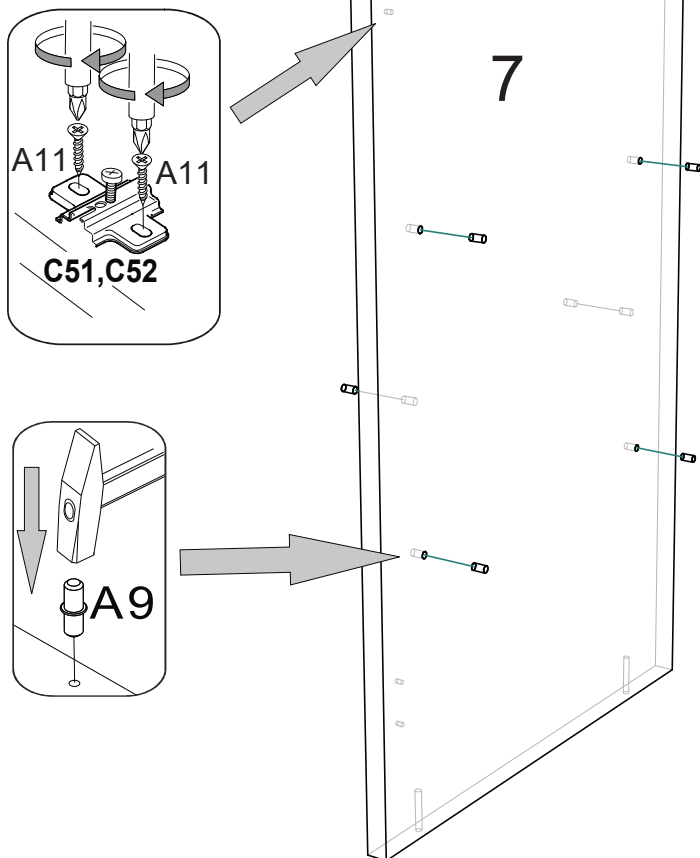


4

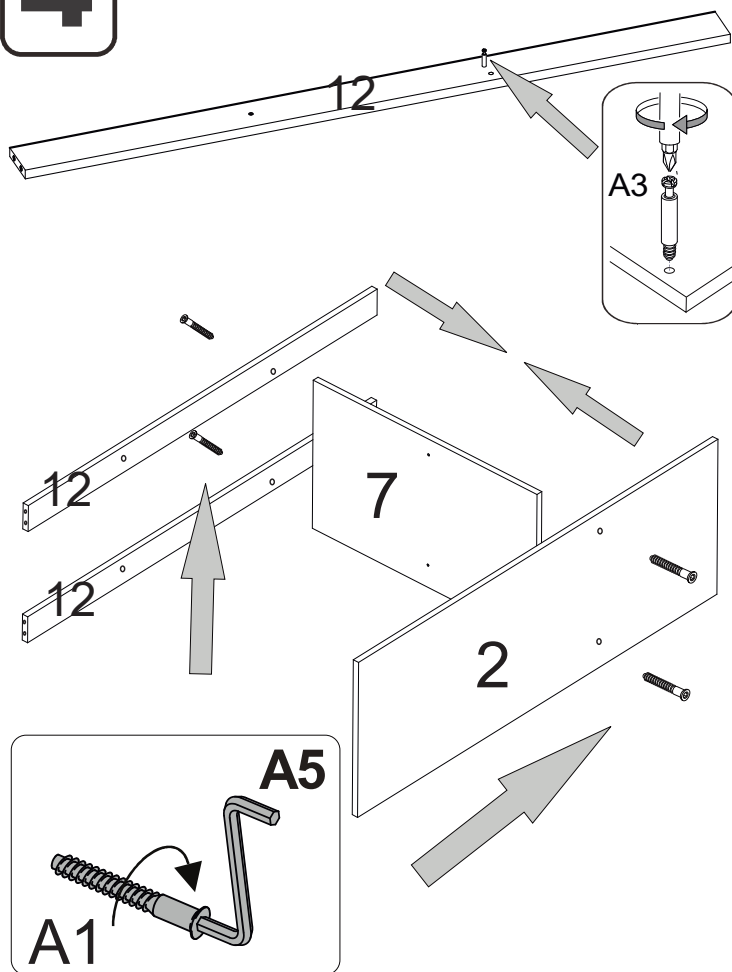




5

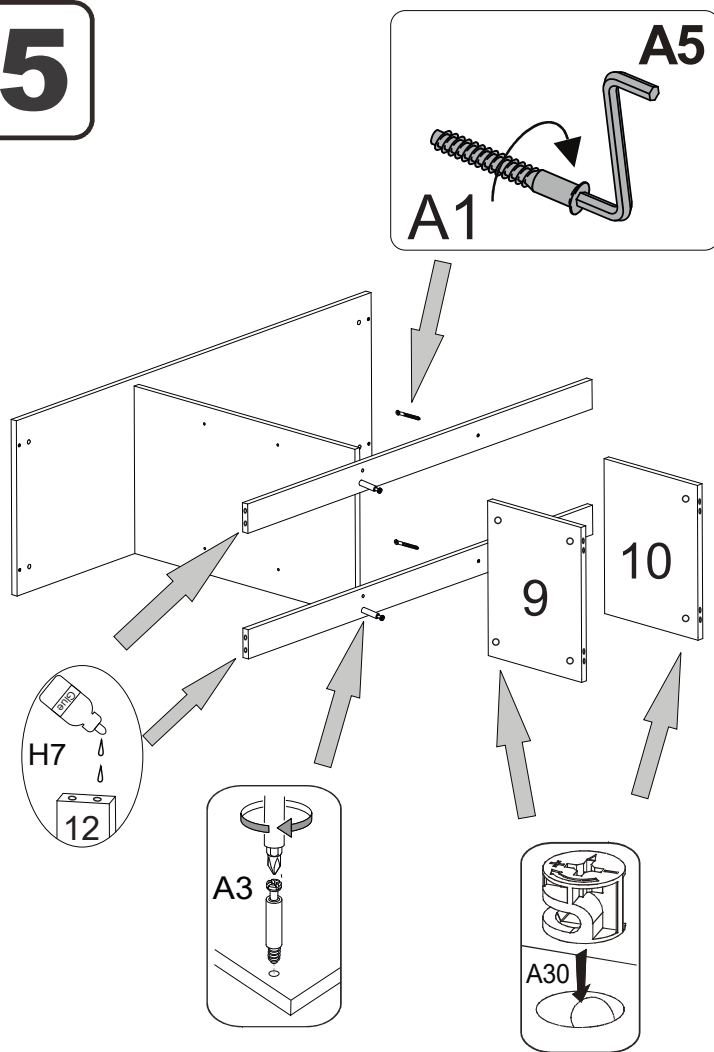



6

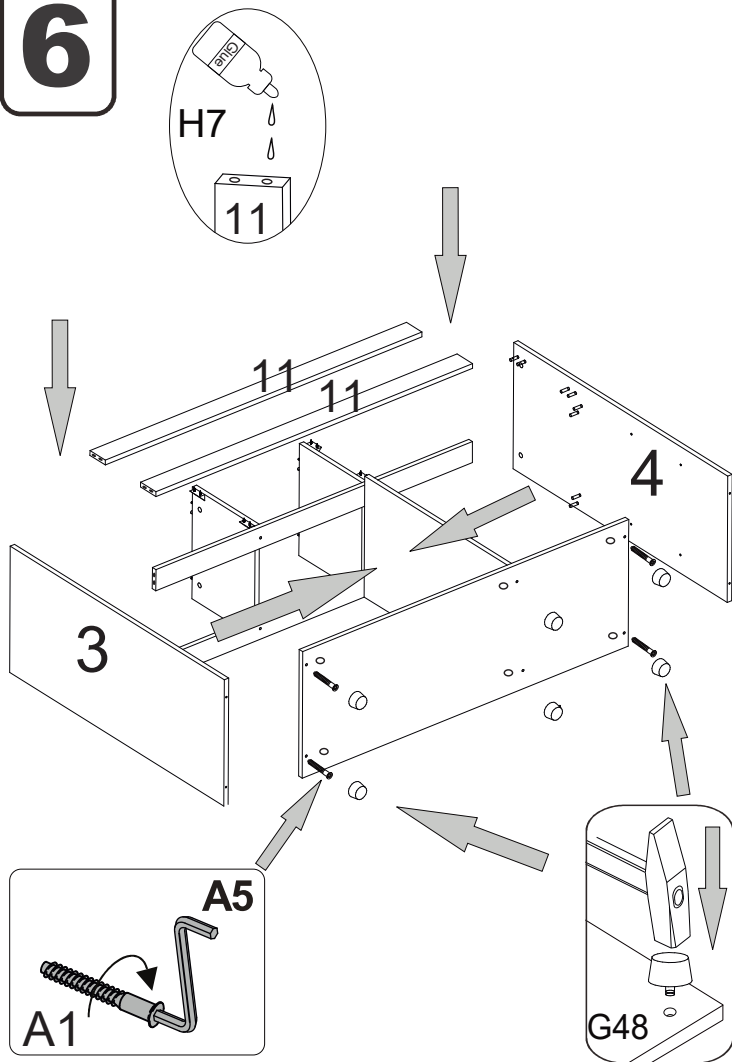




7

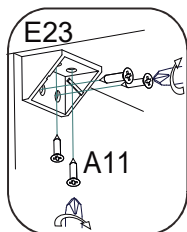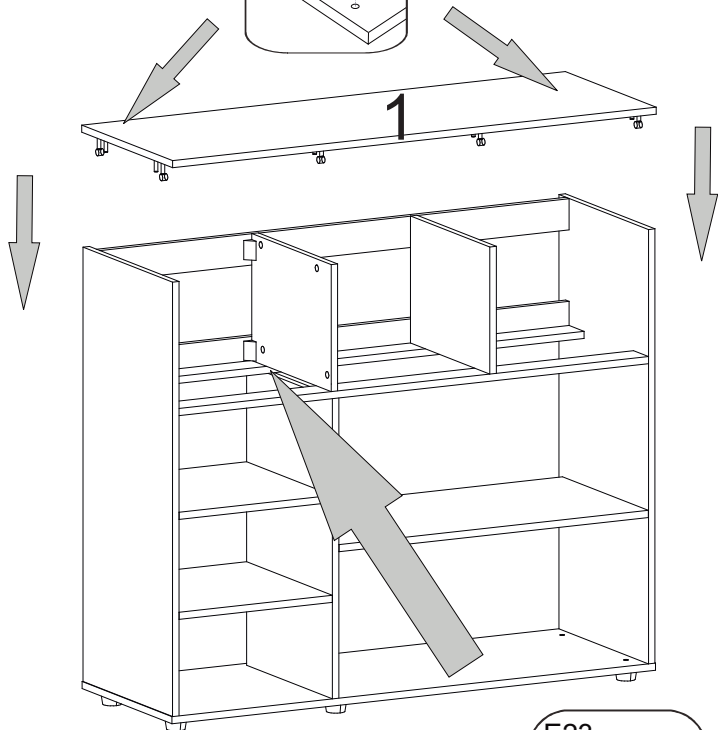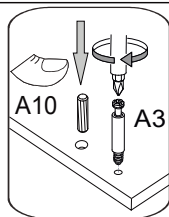



8

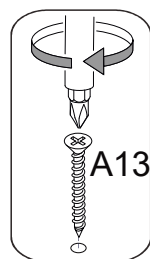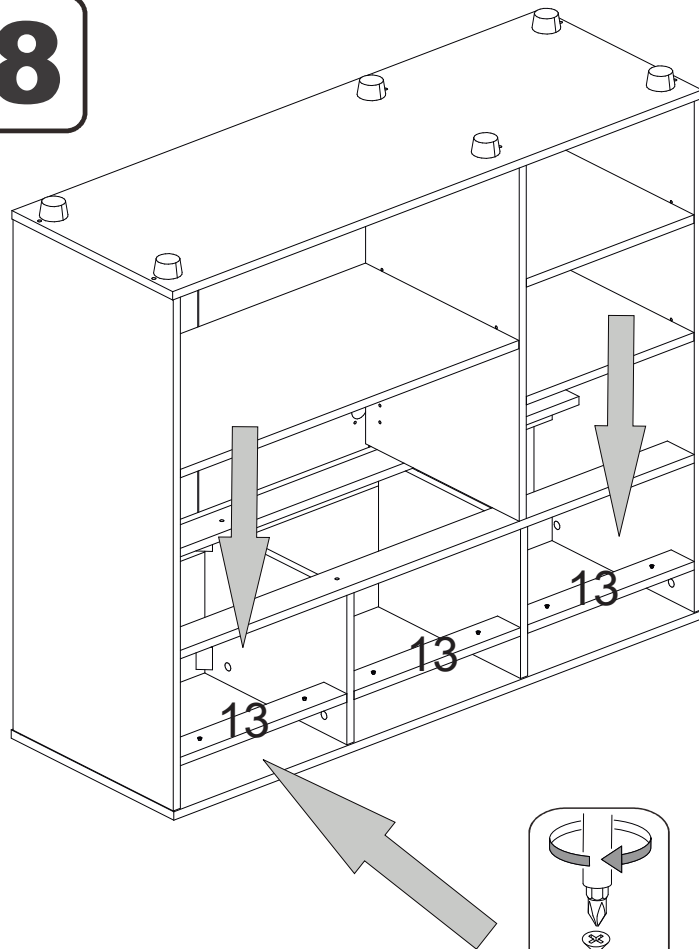




9

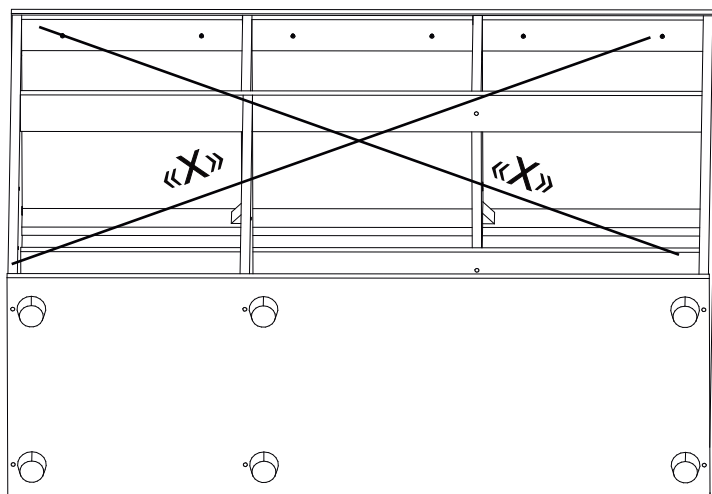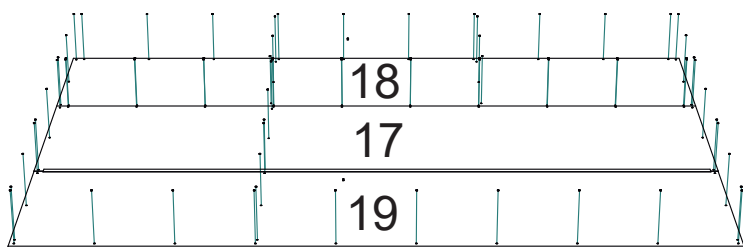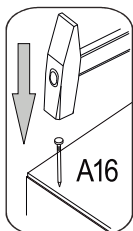


10

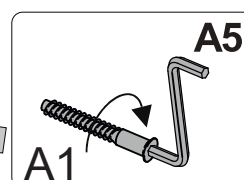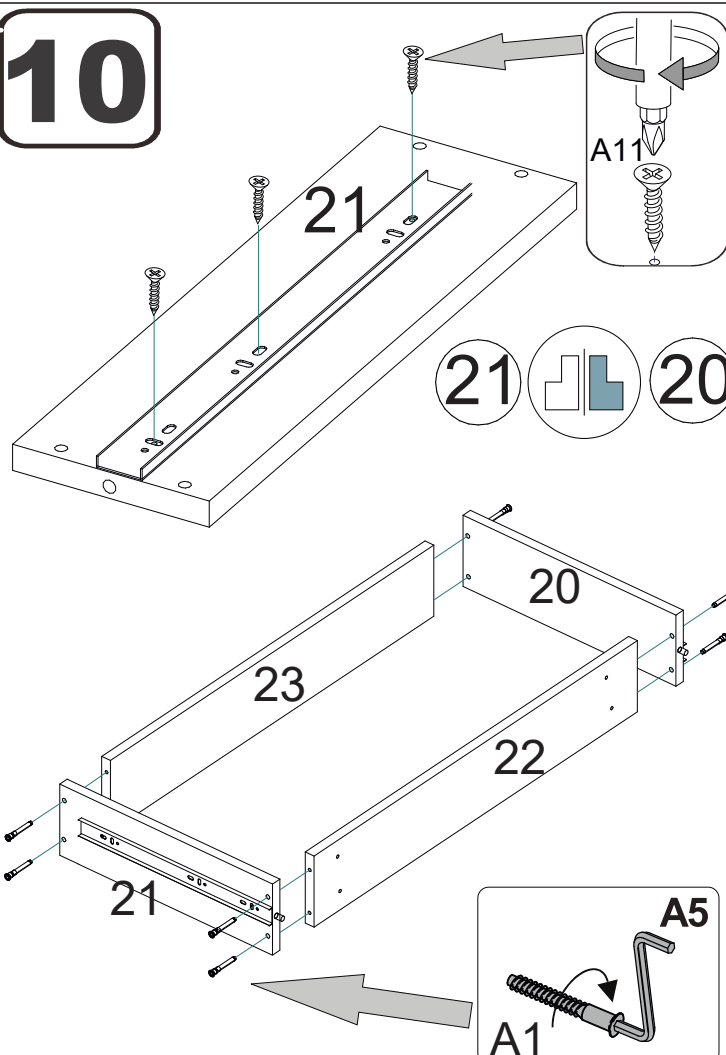



11

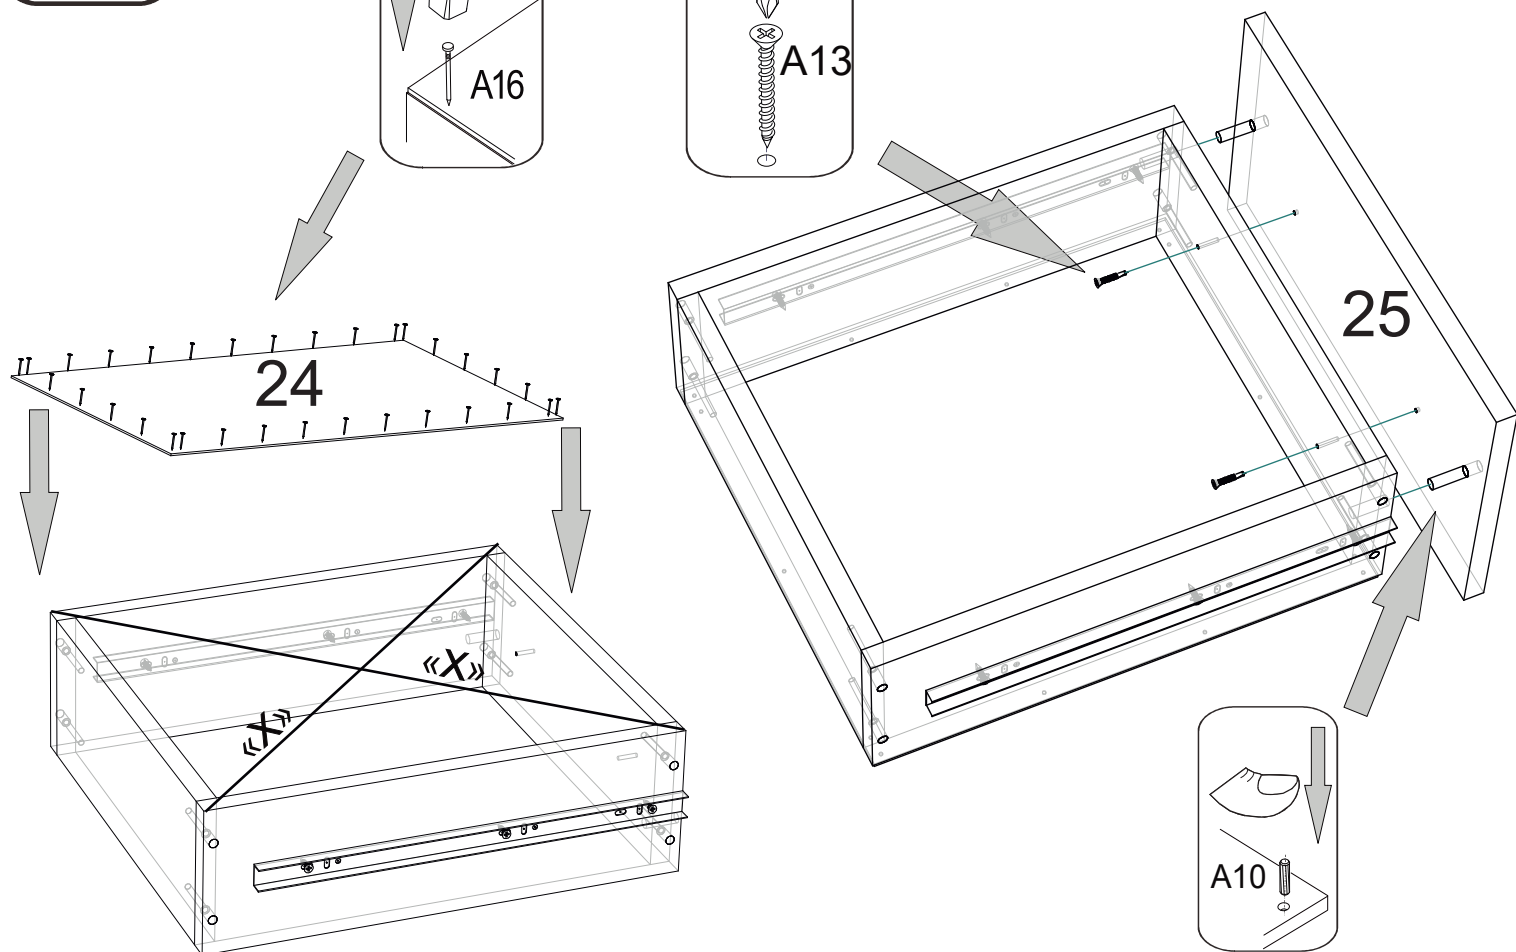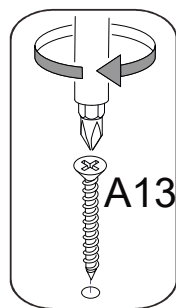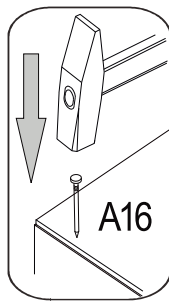


12

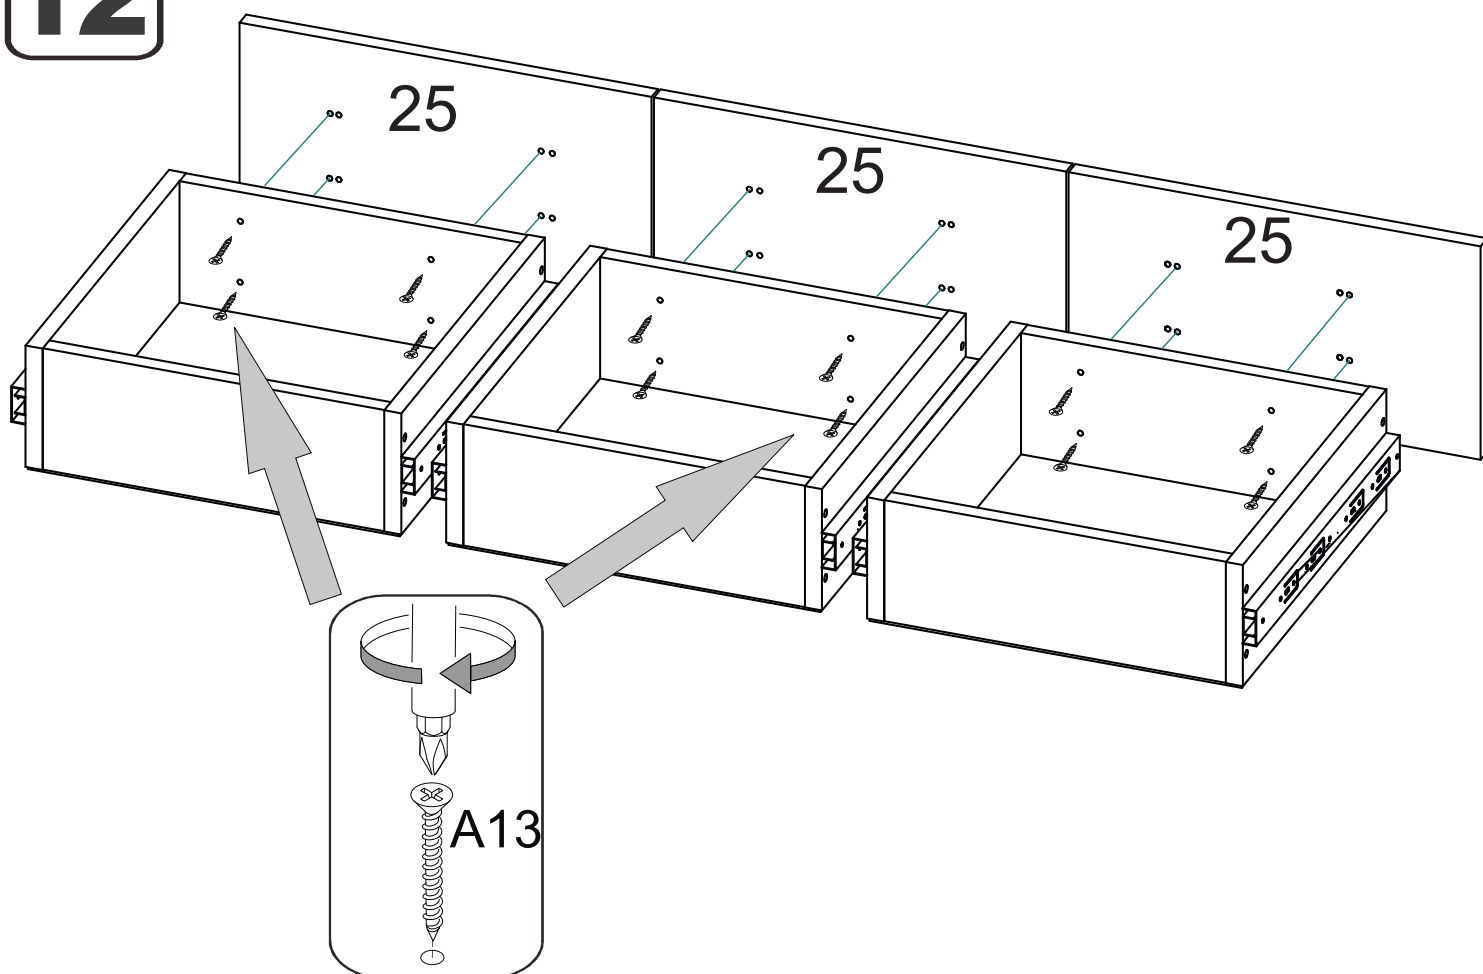



13

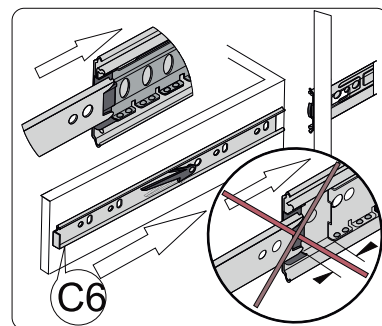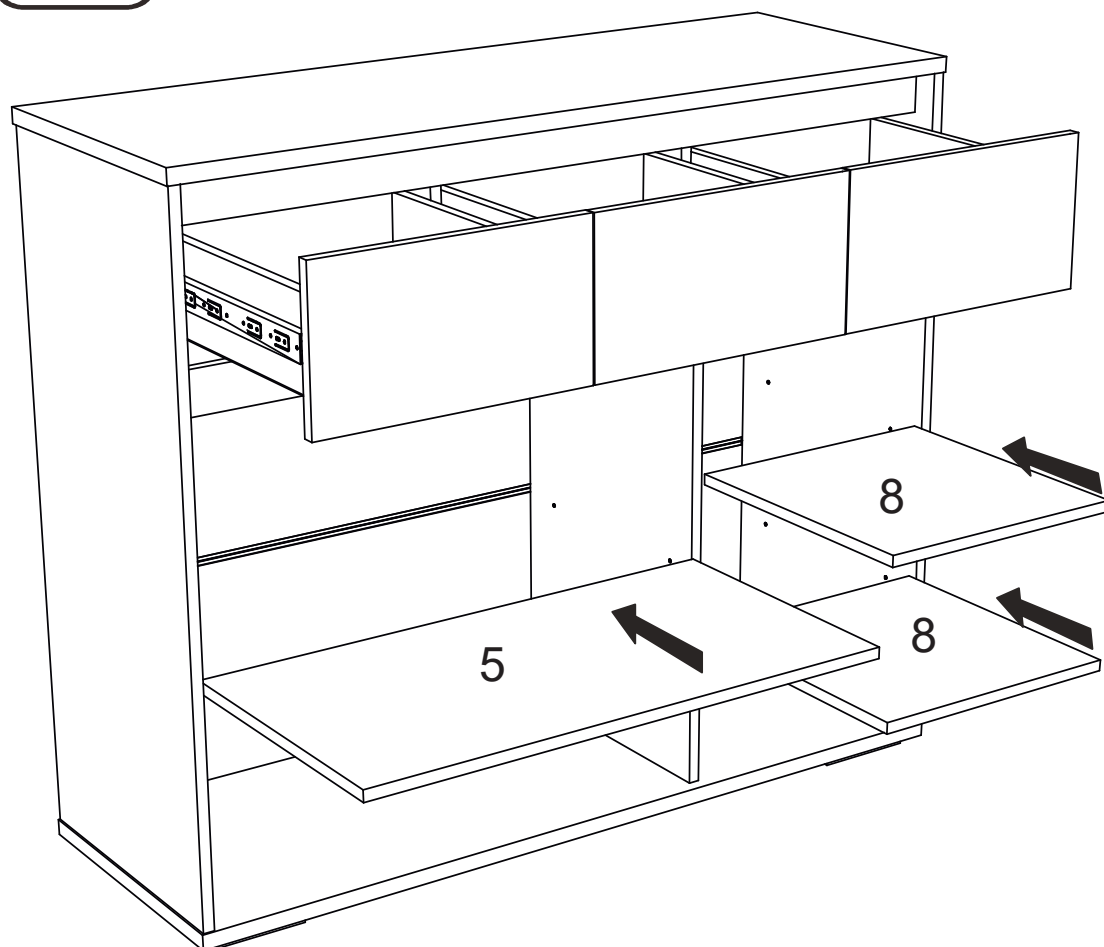

14

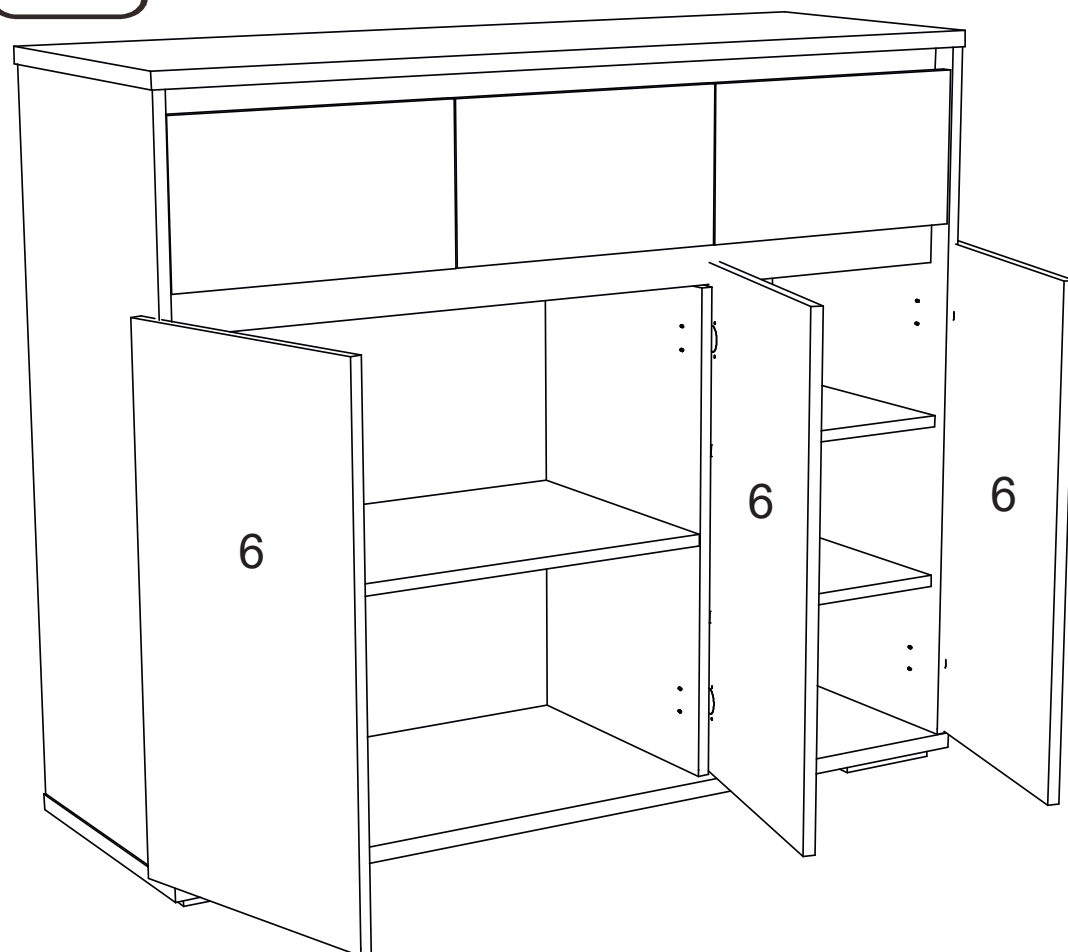

C2, C3

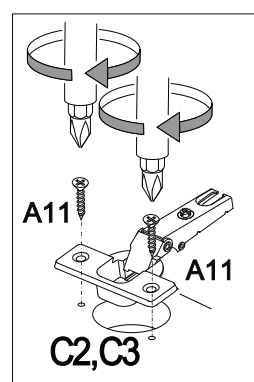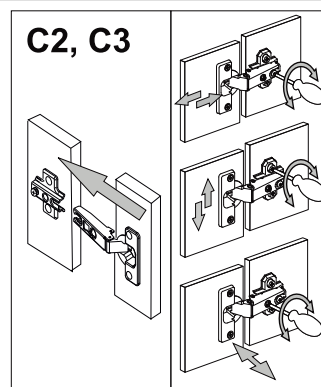

C2, C3