









Кровать Ascet 1400x2000

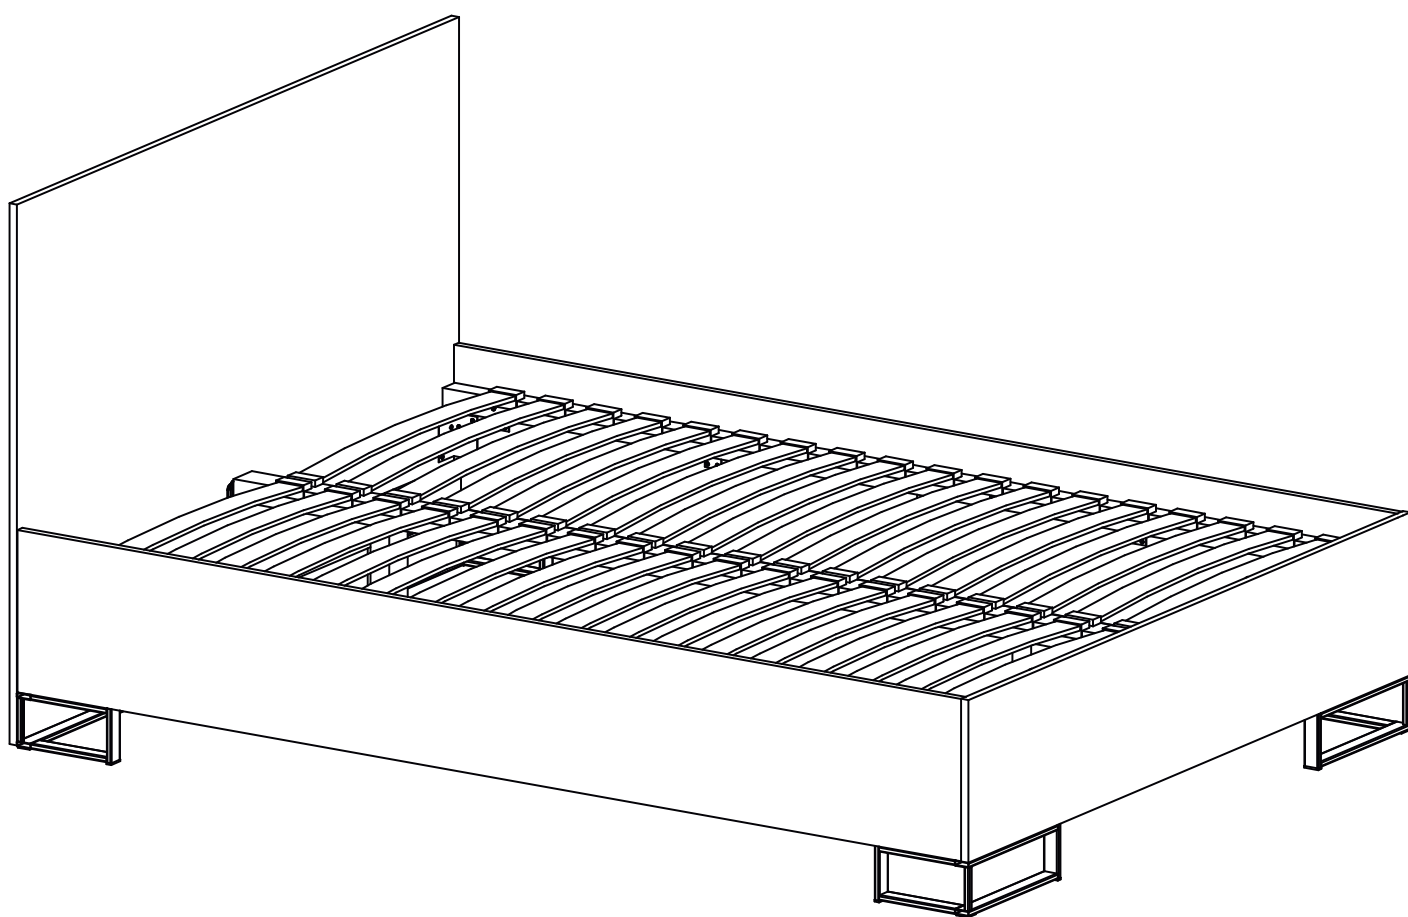

Инструкция по сборке

Кровать Ascet 1400x2000 1470x2060x1000

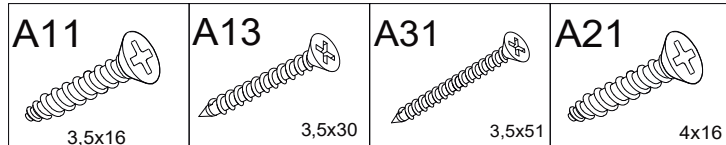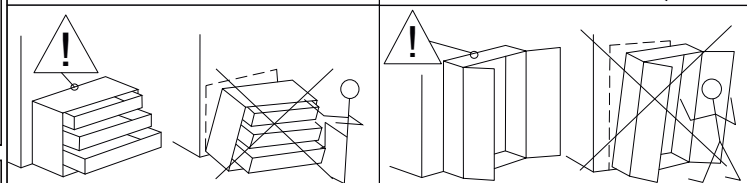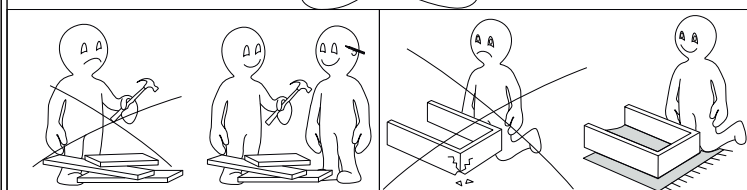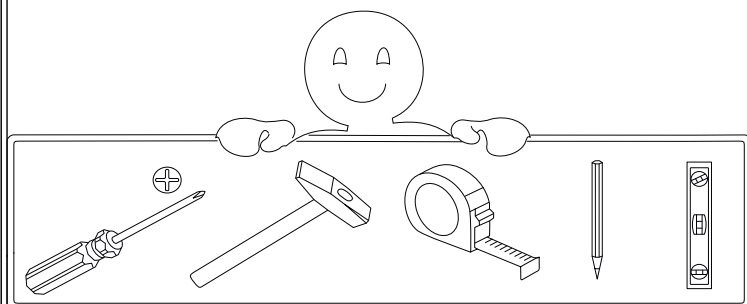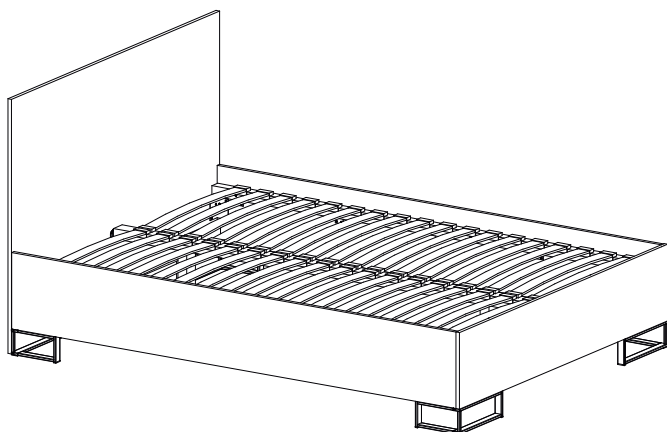


68

31

12

16

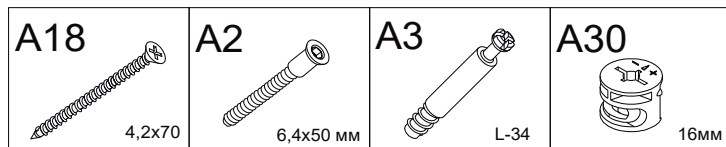


4

4

4

4

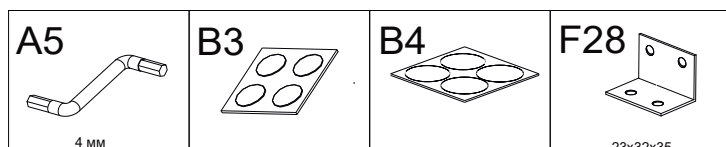


1

4

4

10

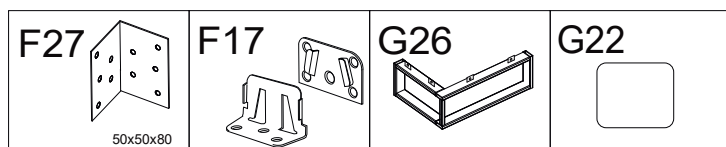


4

2

4

4

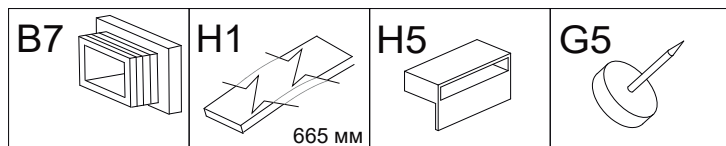

8


36

72


3

№	Д x Ш	К-во
1	2000x300	1
2	2000x300	1
3	1442x1000	1
4	1442x301	1
5	1406x80	1
6	1996x40	2
7	1984x40	1
8	290x40	2

1

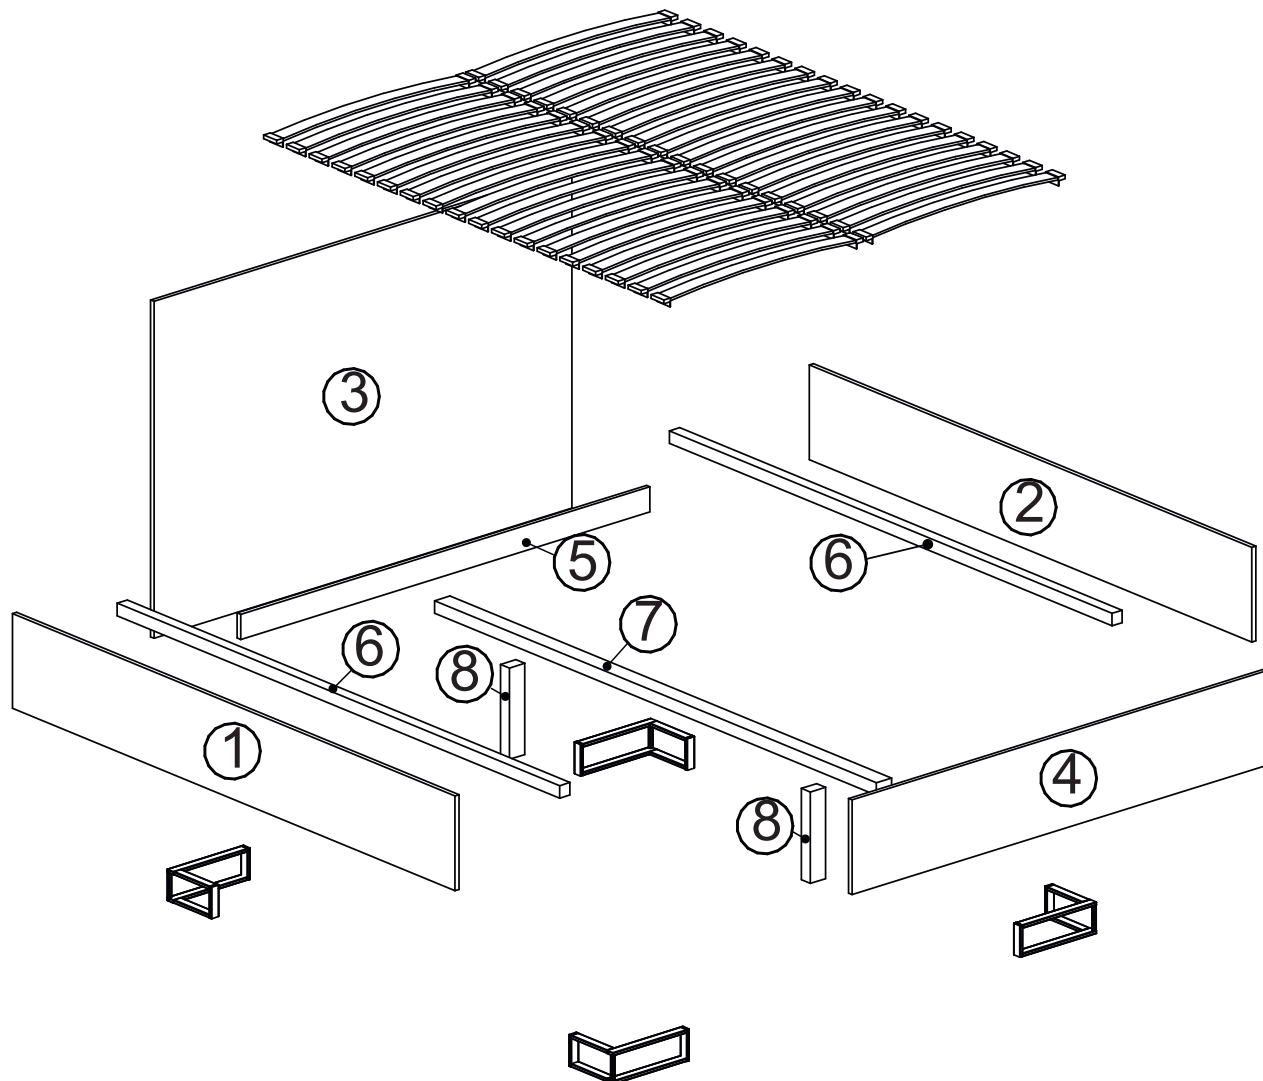

2

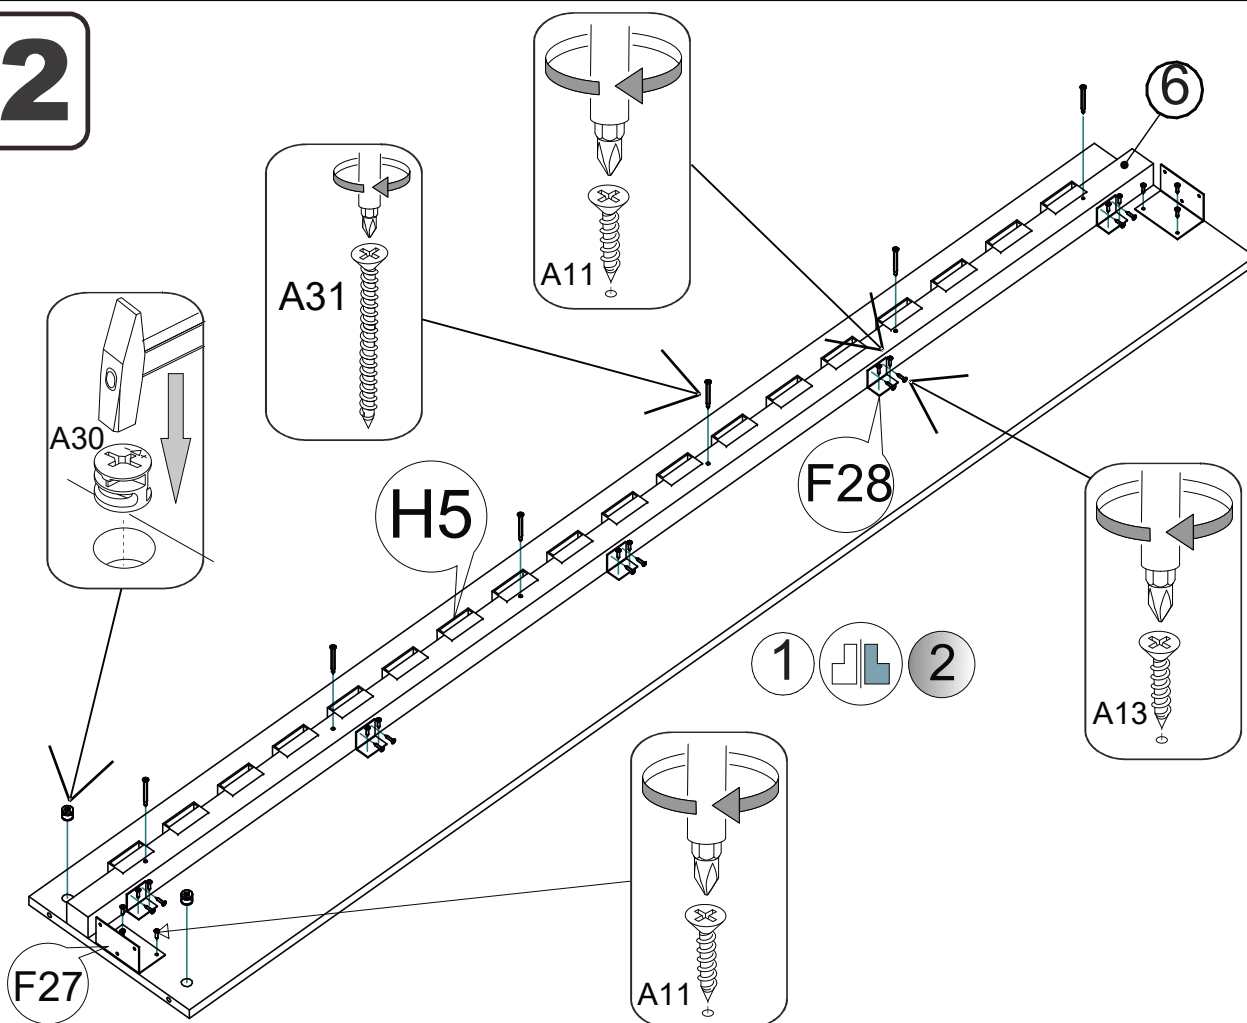

3

Diagram 3 illustrates the mounting of the side rail. The rail (7) is shown being attached to a wall using two wooden brackets (8). The rail features a series of slots (F27) and a locking mechanism (F17). Screws A18 are used to secure the rail to the wall, and screws A13 are used to secure the brackets. The diagram includes callouts for the rail (7), brackets (8), slots (F27), locking mechanism (F17), and the screws (A18 and A13).

4


This diagram illustrates the fourth step of the assembly process. It shows a perspective view of a rectangular wooden frame. Four screws, labeled **A3**, are being driven into the corners of the frame. A callout for **A3** shows a screwdriver turning the screw clockwise into a pre-drilled hole. Two additional screws, labeled **A11**, are being driven into the longer sides of the frame. A callout for **A11** shows a screwdriver turning the screw clockwise. A battery pack, labeled **F17**, is shown being placed into a compartment on the underside of the frame. Arrows indicate the placement of the screws and the battery pack.

A3


A11

F17


5

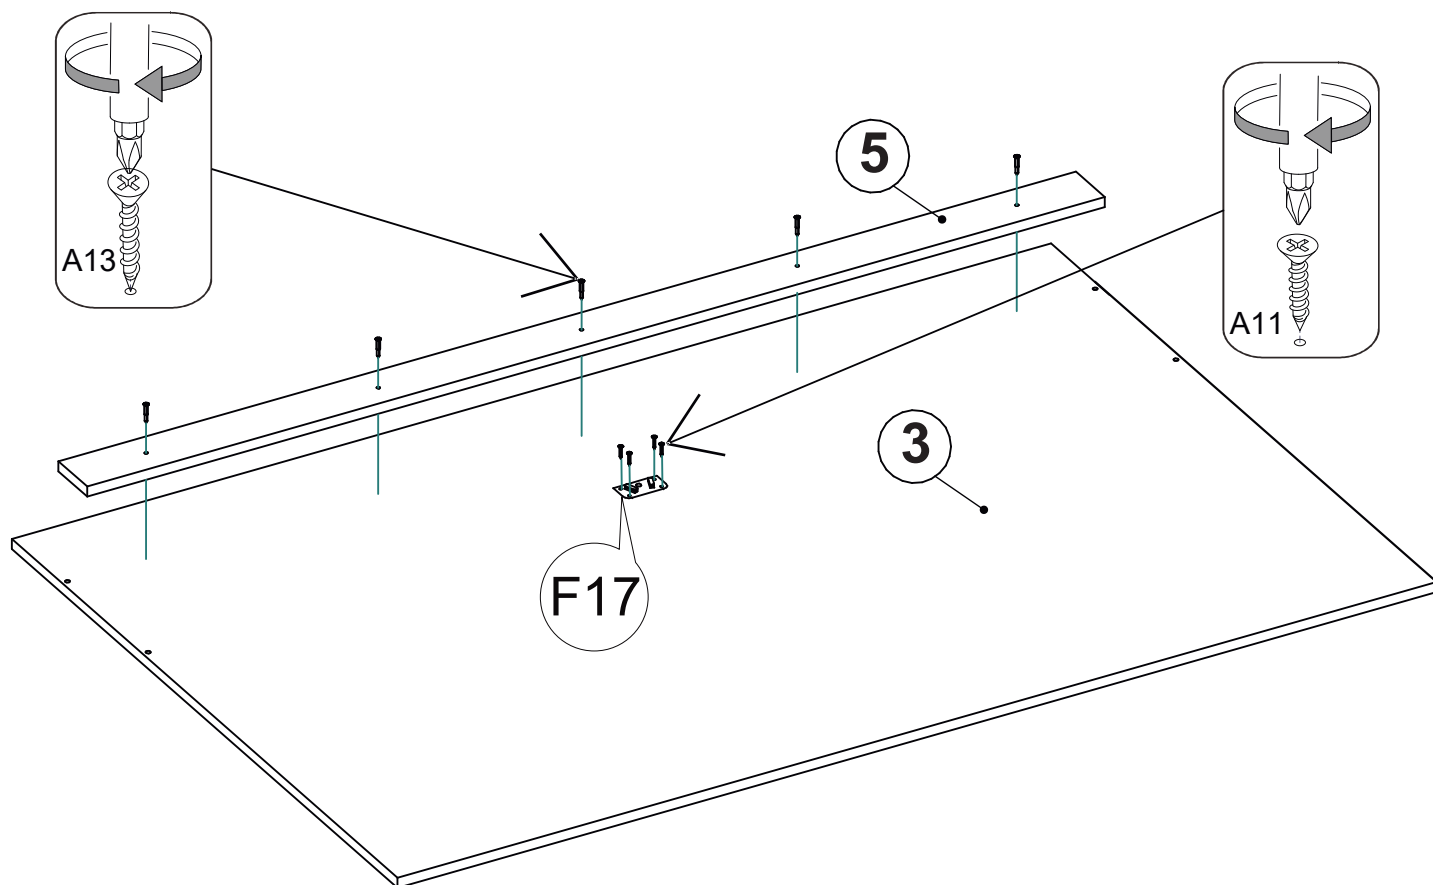


6

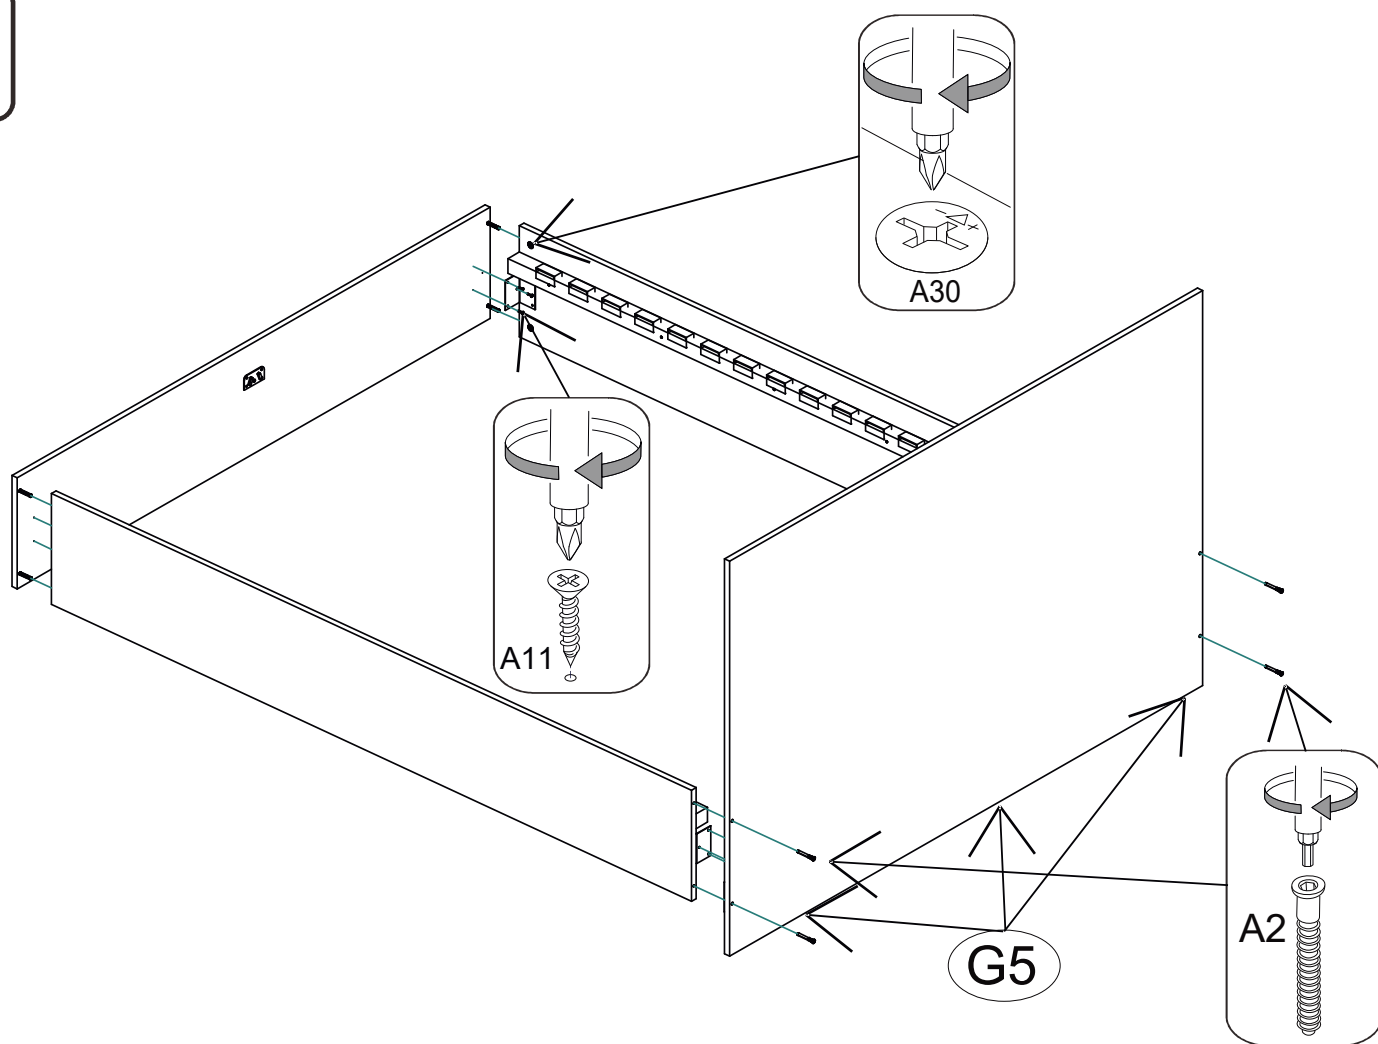


7

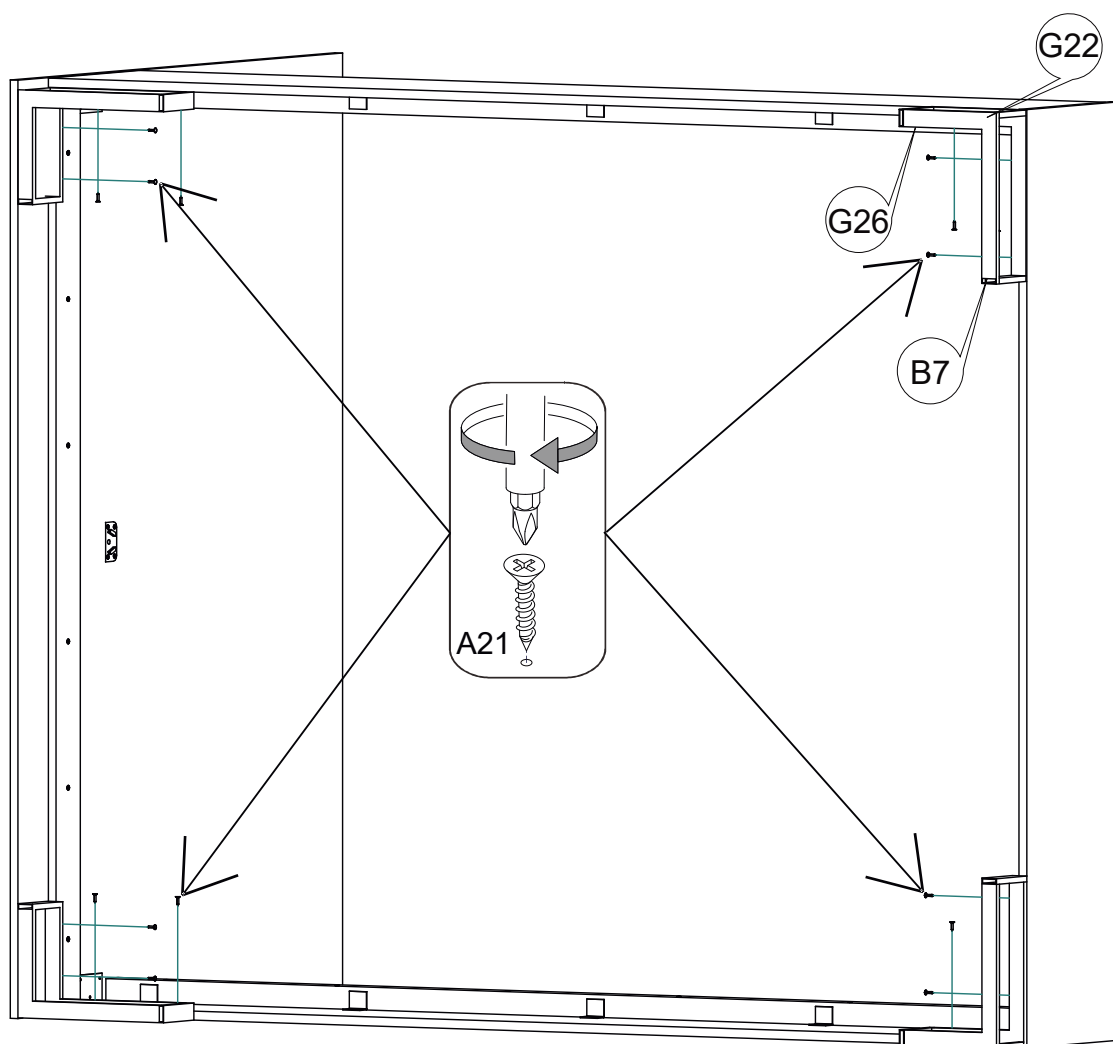


8

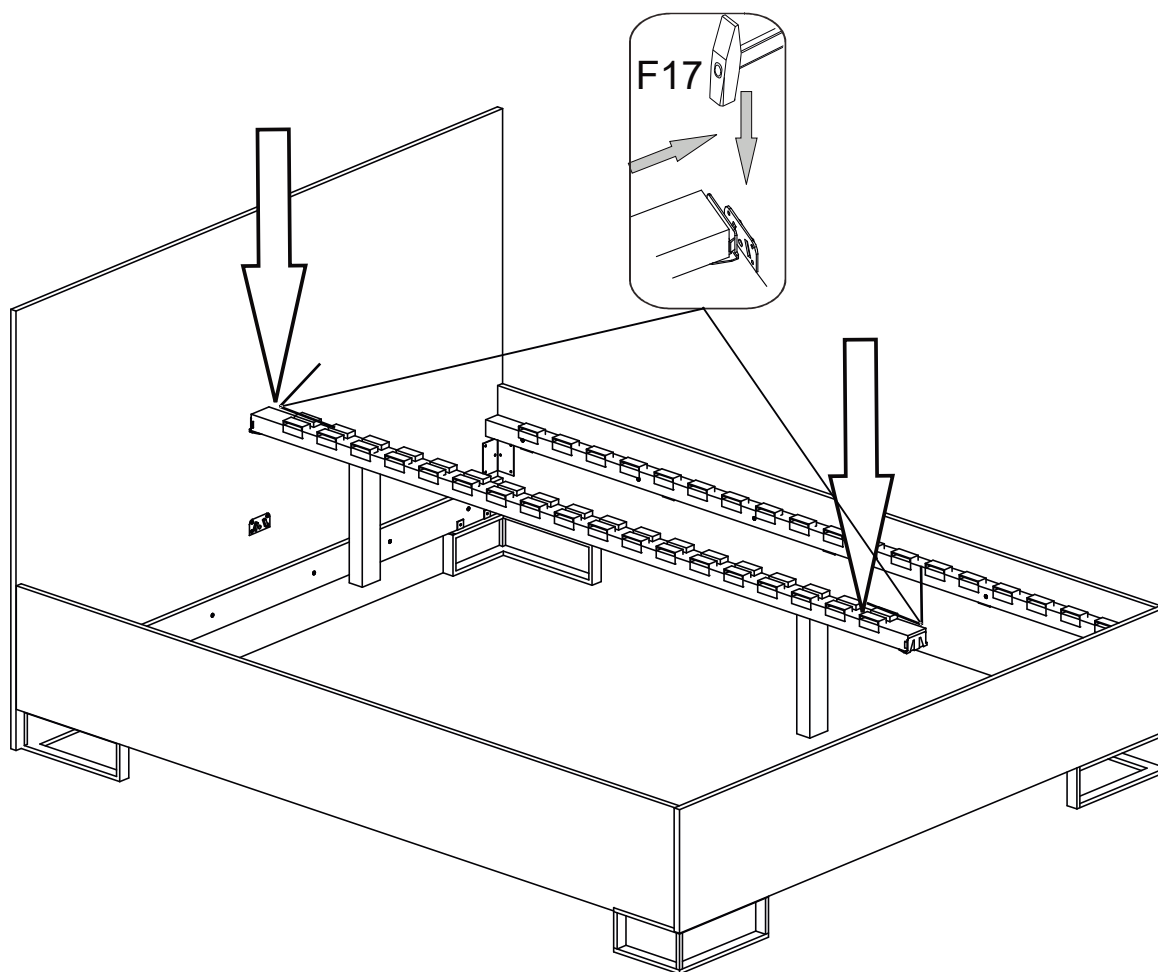

9

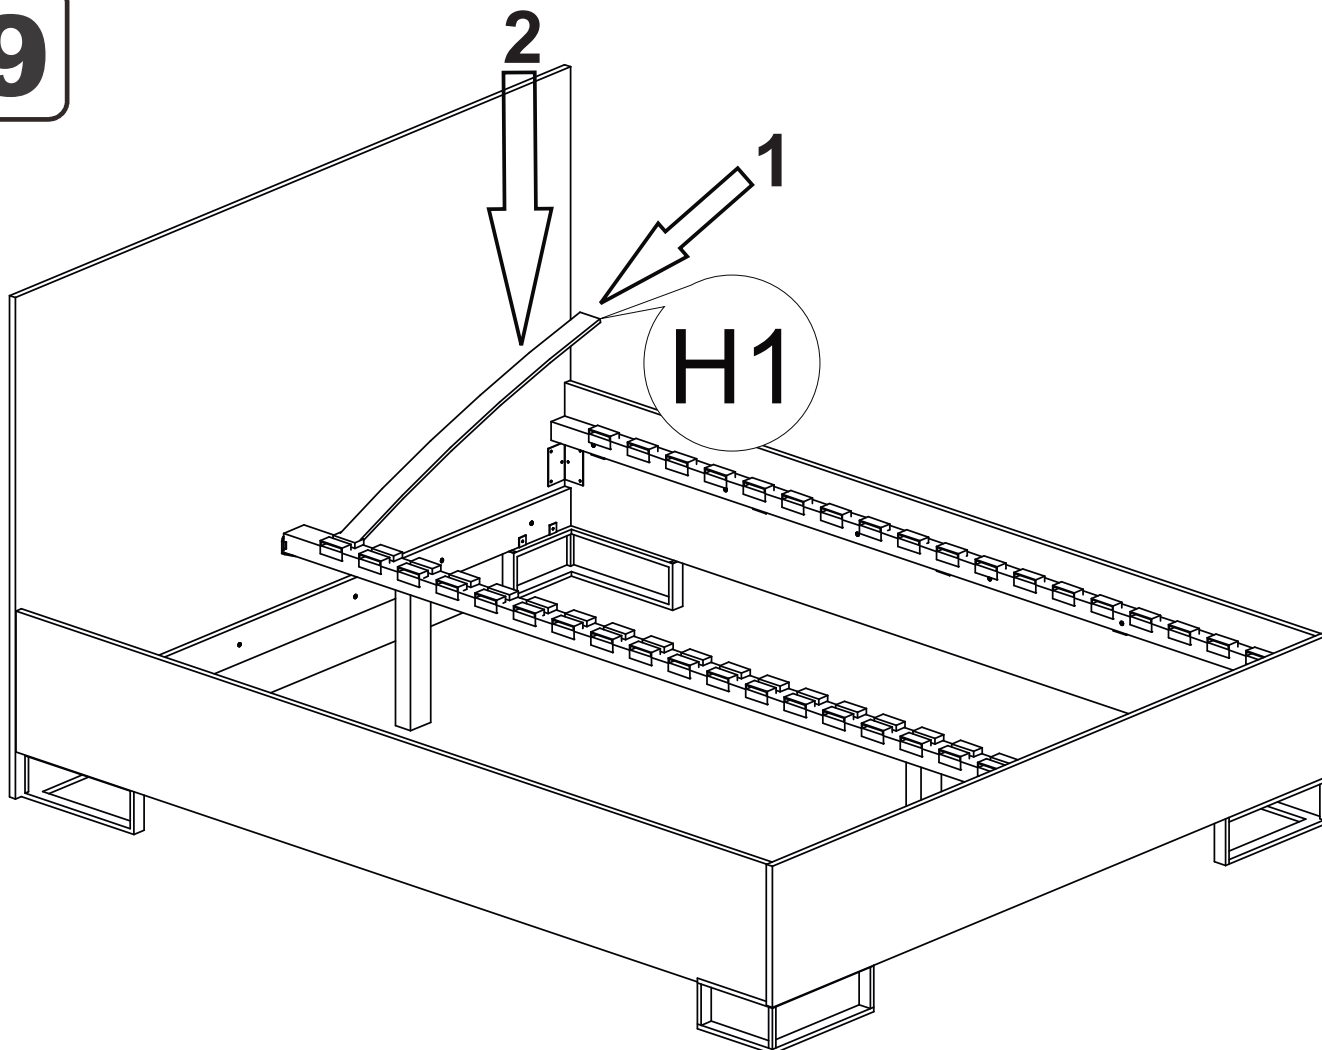

10

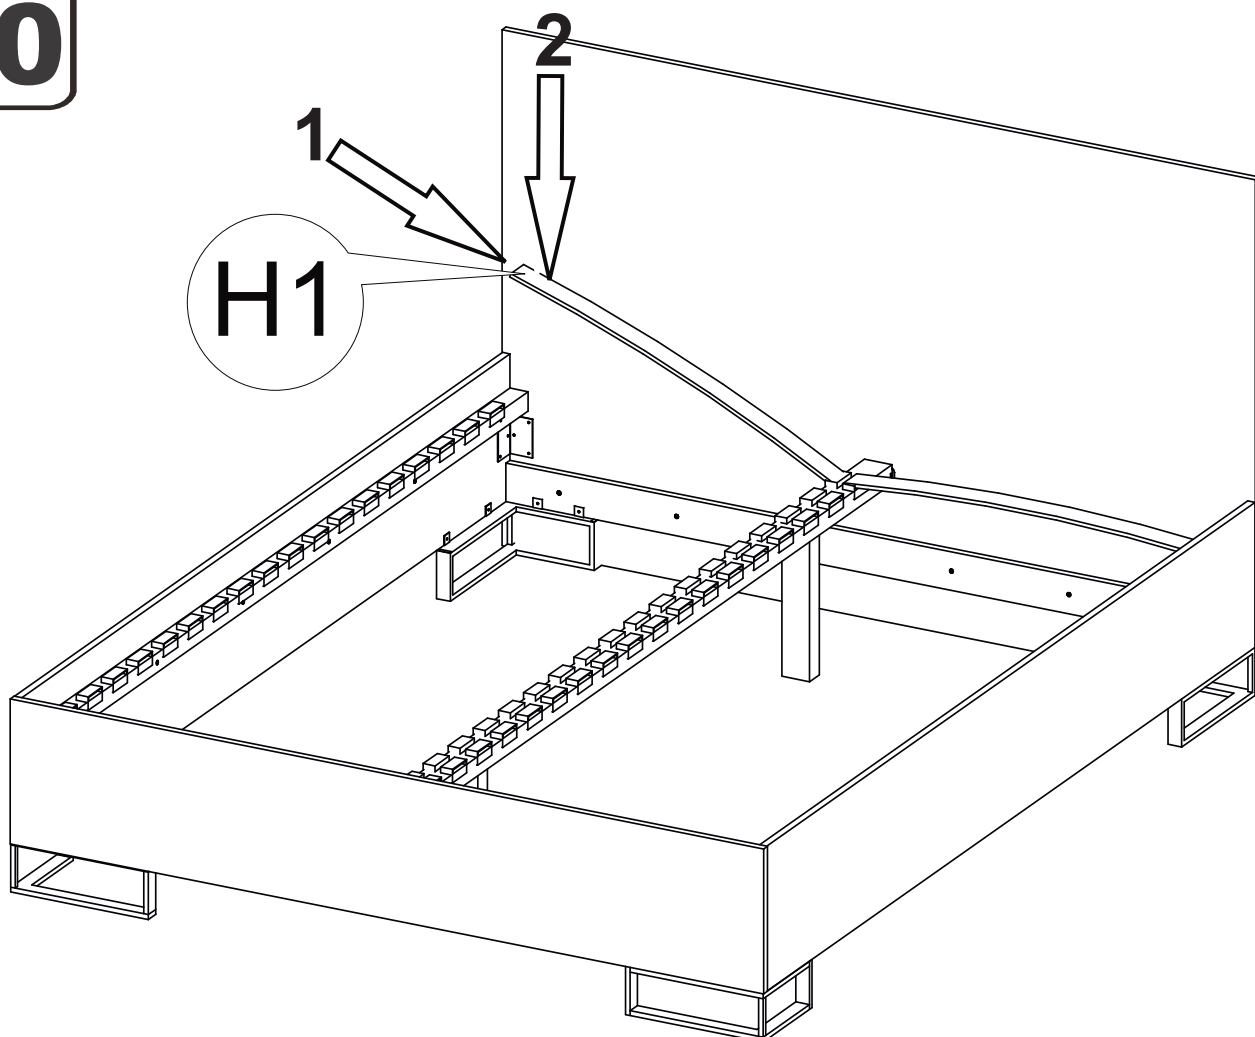

11

